Contents for Kit:

Display Bracket, Android 4.0
Qty. 1
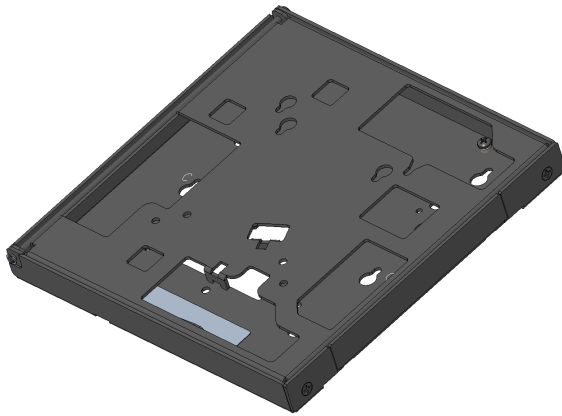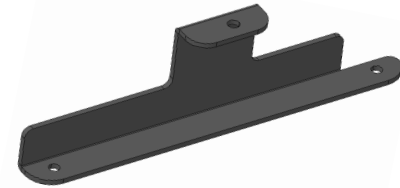

Screws		
Bag **L**	Qty.4	SCREW, M4X6, PAN-HEAD, CROSS-RECESS

Tie-wrap
Qty. 2

EMV Edge Bracket 22 Android
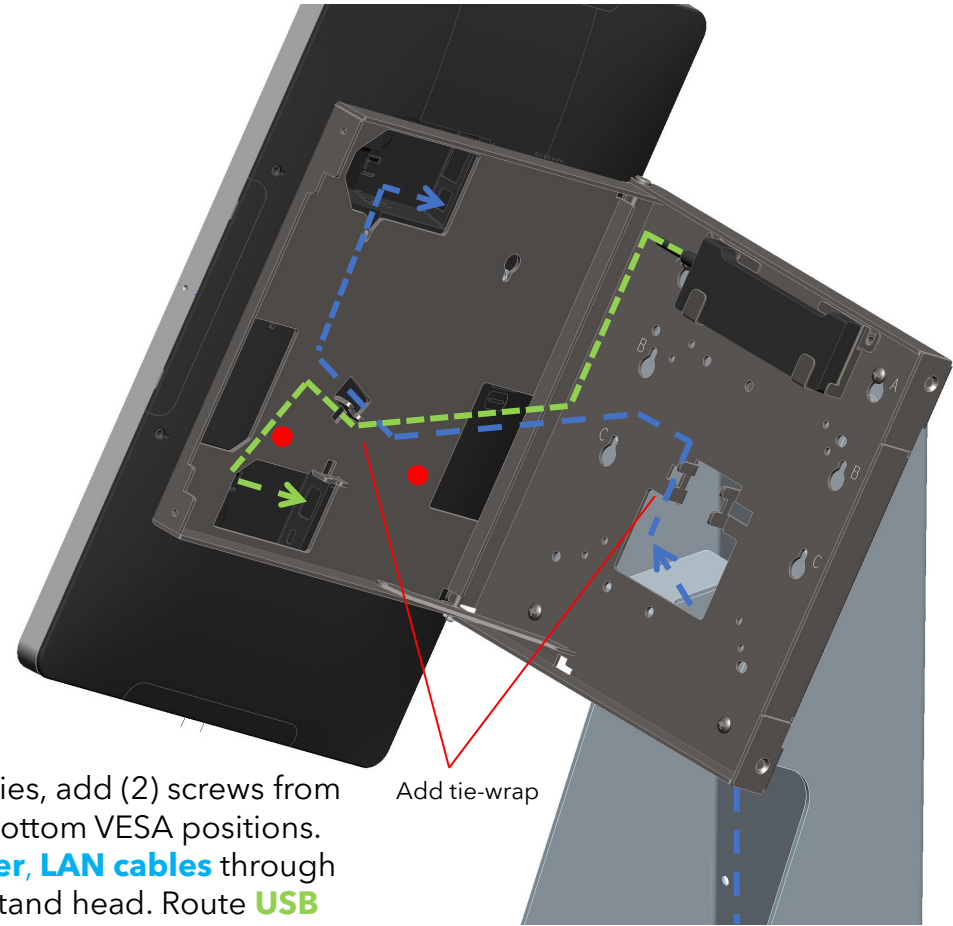4.0 (bag label "22A4")
Qty. 1
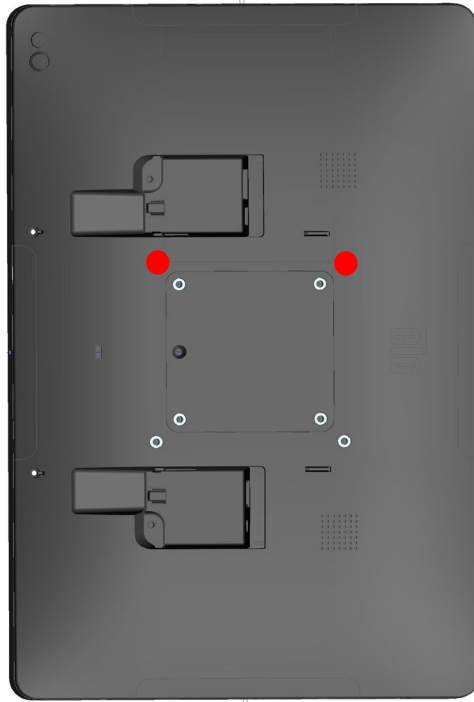
ēlo

Top Portrait

Cable direction

Add (2) screws from bag "L" to top 100mm VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket. Remove cable cover(s) before mounting displays on stand.

Add tie-wrap

Mount I-Series, add (2) screws from bag "L" to bottom VESA positions. Route **power**, **LAN cables** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.
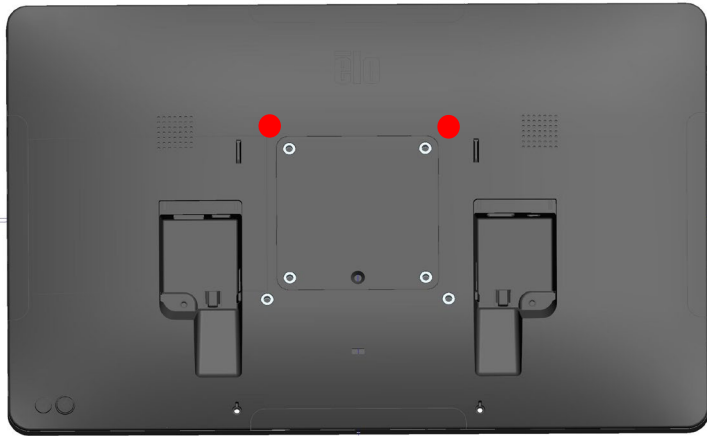
Return to QIG600073 (counter stand) step 18 or QIG600074 (floor stand) step 20
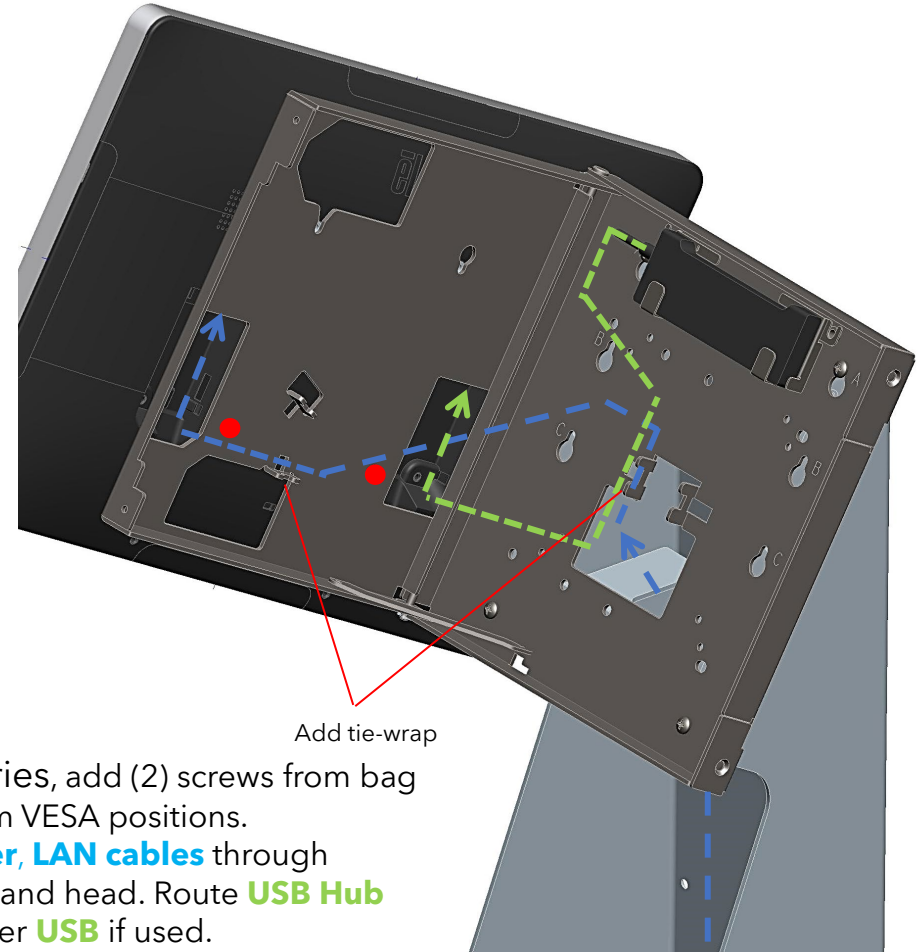
3

Android 2.0/3.0/4.0 Landscape

Top Landscape

Cable direction

Add (2) screws from bag "L" to top 100 mm VESA positions. Leave ~3mm (1/8") gap for mounting to display bracket.
Remove cable cover(s) before mounting displays on stand.

4

See Wallaby™ assembly instructions (QIG600073 steps 1-5 for counter stand, or QIG600074 steps 1-7 for floor stand) before proceeding.

Add tie-wrap

Mount I-Series, add (2) screws from bag "L" to bottom VESA positions.
Route **power**, **LAN cables** through bottom of stand head. Route **USB Hub** cable or other **USB** if used.

Return to Wallaby Countertop Stand QIG step 18 or Wallaby Floor Stand QIG step 20

Learn more about Elo at **EloTouch.com**.

Americas
Tel +1 408 597 8000
EloSales.NA@elotouch.com

Europe (EMEA)
Tel +32 16 930 136
EMEA.sales@elotouch.com

Asia Pacific
Tel +86 (21) 3329 1385
EloAsia@elotouch.com