

Quick Installation Guide

Elo Fingerprint Reader

Elo Touch Solutions Technical Support

Online self-help: www.elotouch.com/support

North America

800-ELO-TOUCH Tel +1 408 597 8000 Fax +1 408 597 8050 EloSales,NA@elotouch.com

Europe

Tel +32 (0)16 70 45 00 Fax +32 (0)16 70 45 49 elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385 Fax +86 (21) 3329 1400 EloAsia@elotouch.com

Latin America

Tel +54 11 4785-9129 EloSales.LATAM@elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc..

© 2020 Elo Touch Solutions, Inc. All rights reserved.





eln

www.elotouch.com

Revision A P/N E550867


Installation

Please go to www.elotouch.com/support to verify you have the latest drivers before installing this device.



Select location to mount the fingerprint reader.


Elo recommends the righthand location in either portrait or landscape orientation.

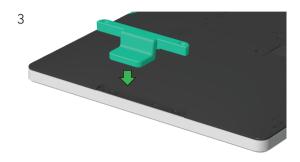

Gently insert the fingerprint reader into the peripheral bay taking care to ensure the connector mates properly.



Remove the selected peripheral cover from the touchmonitor.

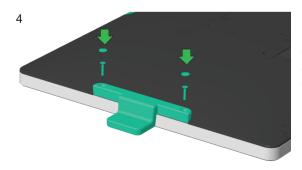

Install the 2 flat head screws included with the kit and cover the screws with the adhesive mylar covers if desired.